


| MOBILUX |

BATTERY FREEZER W. TRICYCLE

Combi version of freezer and cooler. The Mobilux 12 V freezer or cooler is the right choice if you need mobility or don't have power available. It will help you to sell your ice cream, frozen foods or cold drinks in places, where this normally would not be possible as it can be supplied and installed on a tricycle. It works with an input of 230 volt/ 110 volt to a charger, which supplies a 12 volt gel battery. Once loaded, the battery will run a 12 volt compressor. The battery and compressor are both well hidden inside the motor compartment.



TRICYCLE FOR MOBILUX 11

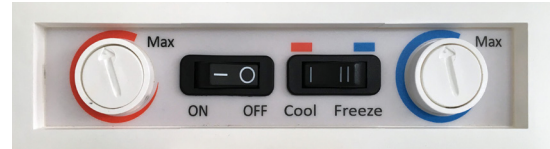

CONTROL PANEL

TRICYCLE	
Dimensions of package:(WxDxH)	60x80x150 cm
Weight of package (kg)	30
Dimensions unpacked (WxDxH) (Incl. freezer)	210x90x118 cm
FEATURES:	
Handbrake	Yes
Internal brake	Yes
Internal gears, pcs	3



MOBILUX 11 FREEZER WITH SCOOP CONTAINER

FEATURES

- Low service costs
- Long life
- Combi version of cooler and freezer
- Accessories including baskets
- see page 62
- Graphics (option)

	MOBILUX 11	MOBILUX 21
Climate class 4	4	4
Ambient temperature range	+16 to +30	+16 to +30
Climate class 5	5	n/a
Ambient temperature range	+16 to +43	-
Gross volume, litres	144	249
Net volume, litres	117	206
Temperature range inside unit	-18 or +4	-18 or +4
Standard refrigerant	R290	R290
Energy consumption / 24 h. Climate class 4 (kwh) 60 % running time	0,9	1,2
Input power for R290 (watt)	59	83
DIMENSIONS		
External dimensions (WxDxH)	724*654*916	1054*654*916
Internal dimensions (WxDxH)	520*450*686	850*450*686
Dimension A	724	1054
Dimension B	654	654
Dimension C	916	916
Dimension D	780	780
Dimension E	520	850
Dimension F	320	650
Dimension G	450	450
Dimension H	686	686
Dimension J	436	436
Dimension L	846	846
Insulation (mm)	100	100
ACCESSORIES		
Max. number of baskets	1	2
Scoop baskets available	Yes	n/a
Castors	Incl.	Incl.
Castors w. brakes	Optional	Optional
Charger and battery included	Yes	Yes
Lock	Yes	Yes
Thermometer	Optional	Optional
Internal light	n/a	n/a
OTHER DATA		
Outer cabinet	White	White
Inner cabinet	Aluminium	Aluminium
Graphics	Optional	Optional
Type of cooling	Static	Static
Type of defrost	Manual	Manual
Power	220V/50Hz	220V/50Hz
Power 110volt / 60 hz	Optional	Optional
Thermostat	Mechanical	Mechanical
Net weight, kg	55	68
Gross weight, kg	62	75
SHIPPING		
20' cont. Capacity	42	30
40' cont. Capacity	90	64
Standard Trailer capacity	102	74

*FOR DIMENSIONS SEE PAGE 19